QUICK GUIDE

Airco 6.7 kW





1. Inside unit

Place the inside unit in the space you want to climatize.



3. Connect tubes and cables on the inside unit

- Connect the prefilled glycoltubes (red > red / blue > blue).
- Connect the **power supply cable** between both units.
- Insert the condensation tube.
- · Attach the grounding cable.



2. Outside unit

Put the outside unit in open air, at max. 20m distance from the inside unit.



4. Connect tubes and cables on the outside unit

- Connect the prefilled glycoltubes (red> red / blue > blue).
- Connect the **power supply cable** between both units.
- Insert the condensation tube.
- Attach the grounding cable.



5. Insert power plug

- A. **Green light** on the upper left: the airco is connected.
- B. Choose between the different working modes: (0) Off / (I) Cooling / (II) Ventilation
- C. Set the **fan speed** (*Min Med Max*)
- D. Choose the desired temperature.

Delta-Temp Belgium

Lange Ambachtstraat 13, 9860 Oosterzele T: +32 (0)9 362 74 87 E: info@delta-temp.com www.delta-temp.be **Delta-Temp Germany**

Carl-Still-Straße 19, 45659 Recklinghausen T: +49 800 4048120 E: info@delta-temp.de www.delta-temp.de