



I. SETUP

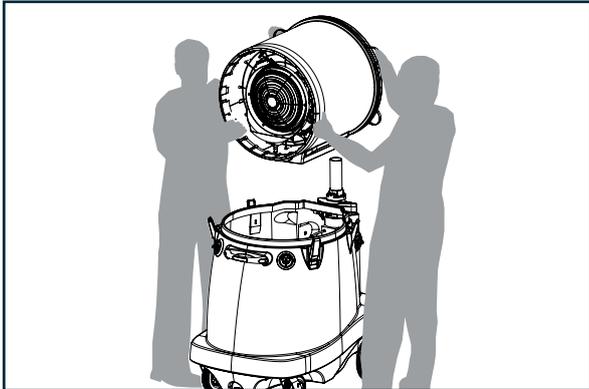


1. Mounting the fan head:

- Lock each of the rear wheels by pressing down on the brakes.
- Lift the fan head straight up and out of the tank and align it with the fan head support pole.
- Turn the fan head until you feel it engage.
- Once installed, the atomizer (metal disk) will be facing the tank, air will be blown over the tank when the unit is turned on.

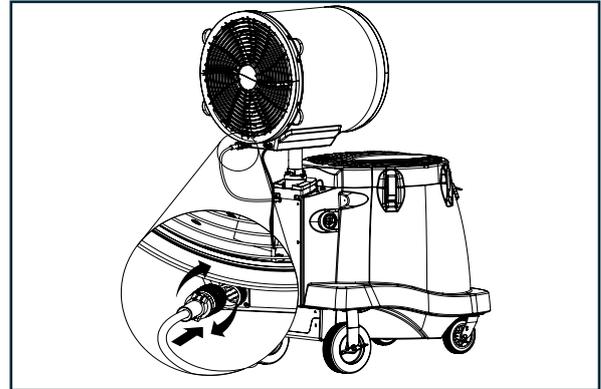


2. Fan Head power connector

- Insert fan head power connector into fan head. Ensure female end of power connector is aligned to male connector and twist together.

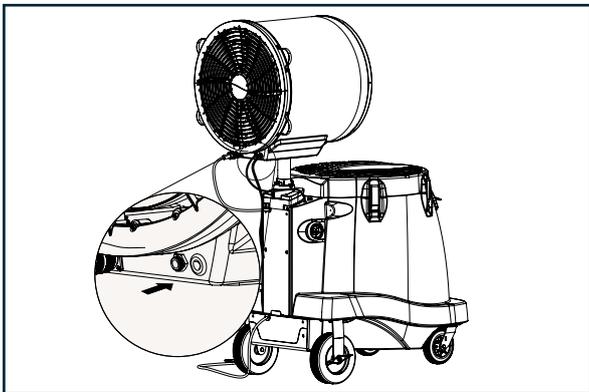

3. Insert water inlet hose:

- Remove water inlet hose from the front hole in the tank and insert into bulkhead fitting. Ensure that connection is sealed.

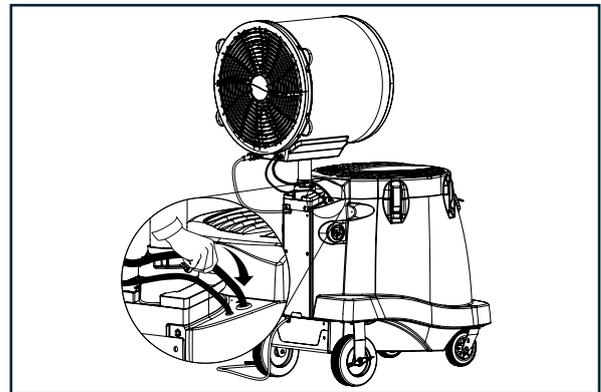

4. Insert atomizer drain hose:

- Insert atomizer drain hose into the front hole on top of the tank, from where the water inlet hose was originally removed.
- Atomizer drain hose should not be submerged below water line.
- Once assembled, the atomizer drain hose should be flexible, but not so loose that water gets backed up in the hose.



Delta-Temp Belgium

Lange Ambachtstraat 13, 9860 Oosterzele
T: +32 (0)9 362 74 87
E : info@delta-temp.com
www.delta-temp.be

Delta-Temp Germany


Carl-Still-Straße 19, 45659 Recklinghausen
T: +49 800 4048120
E : info@delta-temp.de
www.delta-temp.de

II. OPERATION


1. Turning on your unit:

- 1a. Press the **power button**  and **hold for one second**.
The **LED light for the power button** will be lit and the fan blades will begin to slowly rotate to indicate the unit is powered on.
- 1b. Press the **fan speed button**  to increase the fan speed. Adjust the fan speed by pressing the  or  buttons.
- 1c. Press the **oscillation button**  once to activate the oscillation feature.
- 1d. Press the **atomizer button**  once to activate the misting feature.

2. Adjusting the misting level:

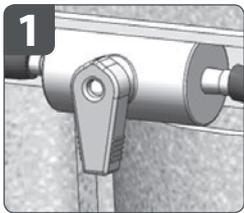

- 1a. Press the **power button**  and **hold for one second** if unit is not already on.
- 1b. Set **fan speed** to desired level.
- 1c. Locate the **water valve**. The **water valve** is located inside the reservoir tank towards the rear of the tank.
- 1d. Start with the **water valve** closed, at the 6 o'clock position as shown.
- 1e. Start the atomizer by pressing the **atomizer button**  once.

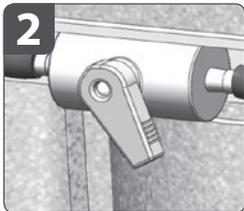

- 2a. Open the **water valve** slightly and check the distance of the mist. There will be a short delay before misting begins.
- 2b. If there is a strong mist at 6 feet away, then the moisture setting is too high for conditions. To reduce misting, rotate the **water valve** lever back towards the 6 o'clock position.

Optimal moisture settings can also be adjusted according to personal preference.

Delta-Temp Belgium

Lange Ambachtstraat 13, 9860 Oosterzele
T: +32 (0)9 362 74 87
E : info@delta-temp.com
www.delta-temp.be

Delta-Temp Germany

Carl-Still-Straße 19, 45659 Recklinghausen
T: +49 800 4048120
E : info@delta-temp.de
www.delta-temp.de